

## Schedule 2: Bus Daily Inspections

| #  | Item to be Inspected                   | Defects  | Major Defects  |
|----|--|--|--|
| 1  | Accessibility devices                  | <ul style="list-style-type: none"> <li>•alarm fails to operate</li> <li>•equipment malfunctions</li> <li>•interlock system malfunctions</li> </ul>           | <ul style="list-style-type: none"> <li>•vehicle fails to return to normal level after “kneeling”</li> <li>•extendable lift, ramp or other passenger-loading device fails to retract</li> </ul>   |
| 2  | Air brake system                       | <ul style="list-style-type: none"> <li>•audible air leak</li> <li>•slow air pressure build-up rate</li> </ul>  | <ul style="list-style-type: none"> <li>•pushrod stroke of any brake exceeds adjustment limit</li> <li>•air loss rate exceeds prescribed limit</li> <li>•inoperative towing vehicle (tractor) protection system</li> <li>•low air warning system fails or system activated</li> <li>•inoperative service, parking or emergency brake</li> </ul> |
| 3  | Cargo securement                       | <ul style="list-style-type: none"> <li>•insecure or improper load covering</li> </ul>  | <ul style="list-style-type: none"> <li>•insecure cargo</li> <li>•absence, failure, malfunction or deterioration of required cargo securement device or load covering</li> </ul>  |
| 4  | Coupling devices                       | <ul style="list-style-type: none"> <li>•coupler or mounting has loose or missing fastener</li> </ul>   | <ul style="list-style-type: none"> <li>•coupler insecure or movement exceeds prescribed limit</li> <li>•coupling or locking mechanism damaged or fails to lock</li> <li>•defective, incorrect or missing safety chain/cable</li> </ul>   |
| 5  | Dangerous goods                        |  | <ul style="list-style-type: none"> <li>•requirements of <i>Transportation of Dangerous Goods Regulations</i> not met</li> </ul>  |
| 6  | Doors and emergency exits              | <ul style="list-style-type: none"> <li>•door, window or hatch fails to open or close securely</li> <li>•alarm inoperative</li> </ul>                         | <ul style="list-style-type: none"> <li>•required emergency exit fails to function as intended</li> </ul>   |
| 7  | Driver controls                        | <ul style="list-style-type: none"> <li>•accelerator pedal, clutch, gauges, audible and visual indicators or instruments fail to function properly</li> </ul> | <ul style="list-style-type: none"> <li>•accelerator sticks and engine fails to return to idle</li> </ul>   |
| 8  | Driver seat                            | <ul style="list-style-type: none"> <li>•seat damaged or fails to remain in set position</li> </ul>   | <ul style="list-style-type: none"> <li>•seatbelt or tether belt insecure, missing or malfunctions</li> </ul>   |
| 9  | Electric brake system                  | <ul style="list-style-type: none"> <li>•loose or insecure wiring or electrical connection</li> </ul>   | <ul style="list-style-type: none"> <li>•inoperative breakaway device</li> <li>•inoperative brake</li> </ul>  |
| 10 | Emergency equipment and safety devices | <ul style="list-style-type: none"> <li>•emergency equipment missing, damaged or defective</li> </ul>   |  |
| 11 | Exhaust system                         | <ul style="list-style-type: none"> <li>•exhaust leak</li> </ul>  | <ul style="list-style-type: none"> <li>•leak that causes exhaust gas to enter the occupant compartment</li> </ul>  |
| 12 | Exterior body and frame                | <ul style="list-style-type: none"> <li>•insecure or missing body parts</li> </ul>  | <ul style="list-style-type: none"> <li>•visibly shifted, cracked, collapsing or sagging frame member(s)</li> </ul>   |

|    |                        |   |  |
|----|------------------------|---|--|
|    |                        | <ul style="list-style-type: none"> <li>•insecure or missing compartment door</li> <li>•damaged frame or body</li> </ul>   |  |
| 13 | Fuel system            |   | <ul style="list-style-type: none"> <li>•missing fuel tank cap</li> <li>•insecure fuel tank</li> <li>•dripping fuel leak</li> </ul>   |
| 14 | General                |   | •serious damage or deterioration that is noticeable and may affect the vehicle's safe operation  |
| 15 | Glass and mirrors      | <ul style="list-style-type: none"> <li>•required mirror or window glass fails to provide required view to driver as a result of being cracked, broken, damaged, missing or maladjusted</li> <li>•broken or damaged attachments of required mirror or glass to vehicle body</li> </ul> | •driver's view of the road obstructed in area swept by windshield wipers   |
| 16 | Heater/defroster       | •control or system failure  | •defroster fails to provide unobstructed view through the windshield.  |
| 17 | Horn                   | •vehicle has no operative horn  |  |
| 18 | Hydraulic brake system | •brake fluid level is below indicated minimum level   | <ul style="list-style-type: none"> <li>•parking brake is inoperative</li> <li>•brake boost or power assist is not operative</li> <li>•brake fluid leak</li> <li>•brake pedal fade or insufficient brake pedal reserve</li> <li>•activated (other than ABS) warning device</li> <li>•brake fluid reservoir is less than ¼ full</li> </ul>           |
| 19 | Lamps and reflectors   | <ul style="list-style-type: none"> <li>•required lamp does not function as intended</li> <li>•required reflector is missing or partially missing</li> <li>•passenger safety or access lamp does not function</li> </ul>   | <p><i>When lamps are required:</i></p> <ul style="list-style-type: none"> <li>•failure of both low-beam headlamps</li> <li>•failure of both rearmost tail lamps</li> </ul> <p><i>At all times:</i></p> <ul style="list-style-type: none"> <li>•failure of a rearmost turn-indicator lamp</li> <li>•failure of both rearmost brake lamps</li> </ul> |
| 20 | Passenger compartment  | <ul style="list-style-type: none"> <li>•stanchion padding is damaged</li> <li>•damaged steps or floor</li> <li>•insecure or damaged overhead luggage rack or compartment</li> </ul>   | <p><i>When affected position is occupied:</i></p> <ul style="list-style-type: none"> <li>•malfunction or absence of required passenger or mobility device restraints</li> <li>•passenger seat is insecure</li> </ul>   |

|    |                            |   |   |
|----|----------------------------|---|---|
|    |                            | <ul style="list-style-type: none"> <li>•malfunction or absence of required passenger or mobility device restraints</li> <li>•passenger seat is insecure</li> </ul>            |   |
| 21 | Steering                   | <ul style="list-style-type: none"> <li>•steering wheel lash (free-play) greater than normal</li> </ul>  | <ul style="list-style-type: none"> <li>•steering wheel insecure, or does not respond normally</li> <li>•steering wheel lash (free-play) exceeds required limit</li> </ul>   |
| 22 | Suspension system          | <ul style="list-style-type: none"> <li>•air leak in air suspension system</li> <li>•broken spring leaf</li> <li>•suspension fastener loose, missing or broken</li> </ul>      | <ul style="list-style-type: none"> <li>•air bag damaged (including patched, cut, bruised, cracked to braid), insecurely mounted or deflated</li> <li>•cracked or broken main spring leaf or more than 1 broken spring leaf</li> <li>•part of spring leaf or suspension missing, shifted out of place or in contact with another vehicle component</li> <li>•loose U-bolt</li> </ul> |
| 23 | Tires                      | <ul style="list-style-type: none"> <li>•damaged tread or sidewall of tire</li> <li>•tire leaking</li> </ul>   | <ul style="list-style-type: none"> <li>•flat tire</li> <li>•tire tread depth less than wear limit</li> <li>•tire in contact with another tire or any vehicle component other than mud-flap</li> <li>•tire marked “Not for highway use”</li> <li>•tire has exposed cords in tread or outer side wall area</li> </ul>   |
| 24 | Wheels, hubs and fasteners | <ul style="list-style-type: none"> <li>•hub oil below minimum level (when fitted with sight glass)</li> <li>•leaking wheel seal</li> </ul>                                    | <ul style="list-style-type: none"> <li>•wheel has loose, missing or ineffective fastener</li> <li>•damaged, cracked or broken wheel, rim or attaching part</li> <li>•evidence of imminent wheel, hub or bearing failure</li> </ul>  |
| 25 | Windshield wiper/washer    | <ul style="list-style-type: none"> <li>•control or system malfunction</li> <li>•wiper blade damaged, missing or fails to adequately clear driver’s field of vision</li> </ul> | <p><i>When necessary for prevailing weather condition.</i></p> <ul style="list-style-type: none"> <li>•wiper or washer fails to adequately clear driver’s field of vision in area swept by driver’s side wiper</li> </ul>   |